


ASUS 6000 Modem Port Açma Ayarları

ASUS 6000 Modemlerde Port açmak için;

İnternet Explorer adres satırına **http://10.0.0.2** yazarak enter butonuna basınız

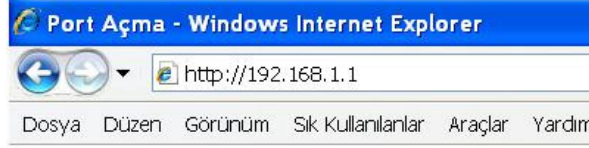

Karşınıza şifre ekranı gelecektir ve bu ekranda **Kullanıcı Adı** ve **Şifre** bölümüne **admin** yazarak **OK** butonuna tıklayın.



Açılan pencerede; Soldaki menü listesinden ->Advanced Setup -> NAT -> Virtual Server seçeneğine tıklayınız.



Açılan pencerede **Add** butonuna basınız. Açılan pencereden; **Customized Service** seçeneğini işaretleyip herhangi bir isim giriniz. **Protocol** bölümünden **TCP / UDP** yi seçiniz. **External** ve **Internal Port** kısımlarına açmak istediğiniz portu yazınız. **Internal IP Address** kısmına da PC, DVR veya IP kameranın IP numarasını yazınız.



ASUS ADSL Router

Welcome

- Device Info
- Quick Setup
- Advanced Setup
 - WAN
 - LAN
 - NAT
 - Virtual Servers
 - Port Triggering
 - DMZ Host
 - Firewall
 - Routing
 - DNS
 - ADSL
- Management
- Diagnostics

NAT -- Virtual Servers

Select the service name, server IP address and click "Apply" to forward IP packets for this service to the specified server.

Service Name:
 Select from the following list:
 Customized service:

Protocol: TCP / UDP

External port (port or port:port): 80

Internal port (port or port:port): 80

Internal server IP address: IP ADRESİNİZ

Apply

Bütün portları girdikten sonra yönlendirme işlemi tamamlanmış olacaktır.